

**PART# 8051 | 5.0L ONLY****11-12 MUSTANG CAT-BACK SIDE EXHAUST SYSTEM****Notice: Altered Parts are Non-Refundable**

- Note: The side exhaust system must be installed before the side skirts.**  
**Note: Do not tighten exhaust clamps or brackets until installation is complete.**  
**Note: The side skirts must be installed before the exhaust tip installation.**

Install the two Cervini's mufflers into the X-pipe using the factory hardware **as shown in fig A**. There are two long L-braces and two short L braces, install them to the under side of the car where there are threaded holes in the floor using the supplied bolts and washers **as shown in fig B**, and **fig C**. Install the two bolt band clamps to the other side of the mufflers, slide the bent pipes into the mufflers and attach them to the L braces previously installed using the blue bushings, bolts, and lock nuts in the hardware packet. (With the hanger braces on the pipe facing up you can distinguish left from right.) With the exhaust system in place you can notice the emergency brake cables are touching the exhaust pipes, use the black zip ties to secure them to the lower control arm **as shown in fig D**. The exhaust tips can be installed after the side skirts have been installed. Slide the one bolt band clamp over the tail pipe and then install the exhaust tip through the side skirt opening and into the tail pipe. Exhaust tips must be centered ¼" past the outer edge of the side skirt opening. Failure to do so may cause damage to the side skirt. With the exhaust tip in position, tighten all clamps with an impact gun. Hand tighten all remaining nuts and bolts. Most of the adjustment for centering the exhaust tips is in the short L brace, if centering the the exhaust tip can not be achieved with this L brace you will need to loosen the two bolt band clamps on the front or the rear of the muffler and slide the pipes in or out to get more adjustment.

PART #8051		
QTY	DESCRIPTION	HARDWARE #
2	MUFFLERS	PYP-MVR200S-SP
1	DRIVER SIDE TAIL PIPE	PYP-SFM500S
1	PASSENGER SIDE TAIL PIPE	PYP-SFM500S
2	1 BOLT, 2-1/2" BAND CLAMPS	PYP-SSC2620
1	PARTS BAG	
4	BLACK ZIP TIES	70215K53
1	DRIVERS SIDE EXHAUST TIP	PYP-EVT500
1	PASSENGER SIDE EXHAUST TIP	PYP-EVT500



Fig. A

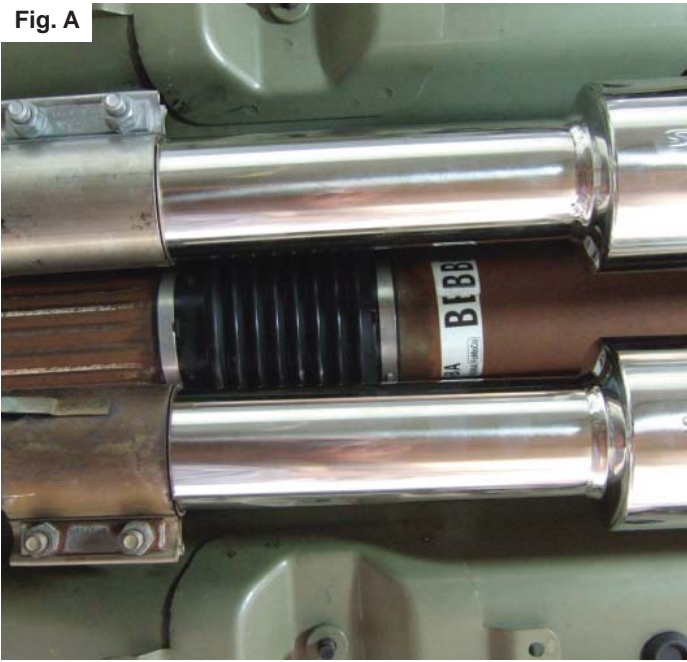


Fig. B

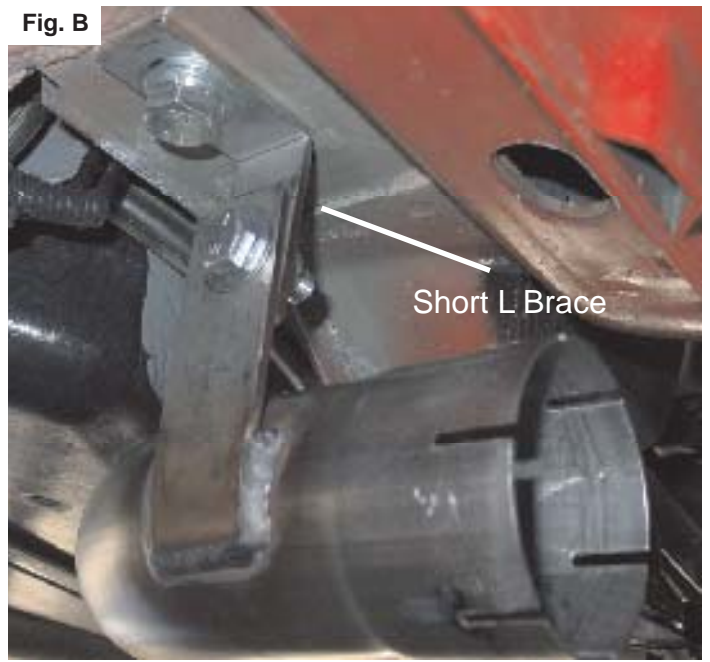


Fig. C



Fig. D

