


## Raxiom Map Light LED Conversion Kit (05-14 All)

### Installation Instructions:

- 1) Start by pulling the cover for the dome bulbs from the front as shown in the picture below. Simply grasp the cover firmly and pull down. The cover is being held by two plastic clips on both sides of the cover.



- 2) Use your thumb to depress the tab holding the harness to the grey connector. Once you release the tab, gently pull the harness away.

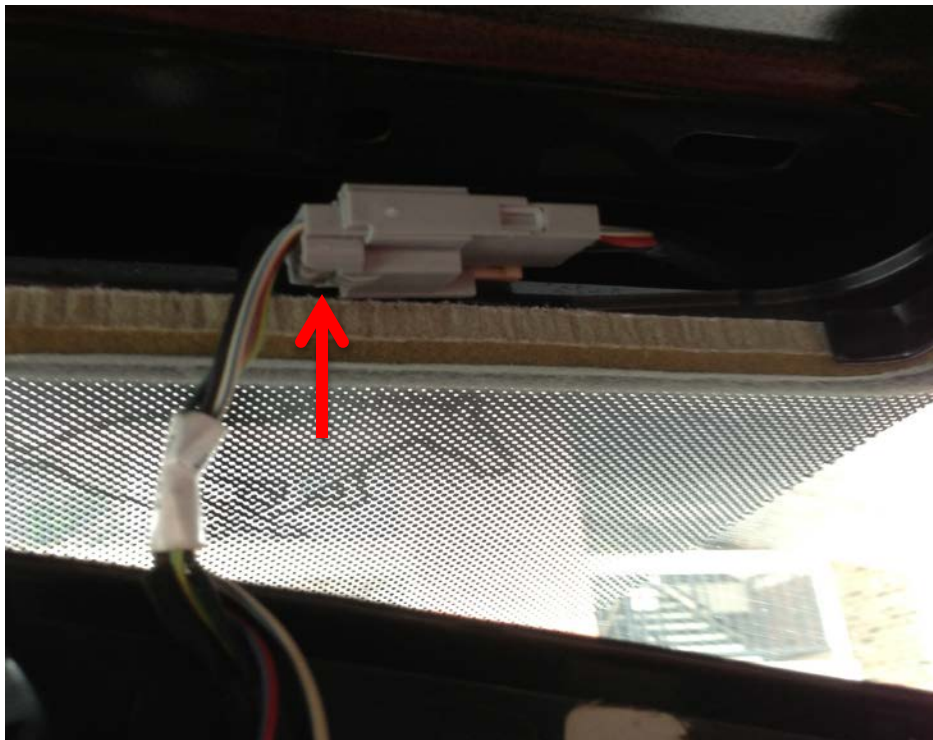


- 3) There are two separate bulbs in the housing. Remove the bulbs by pulling them straight out.



- 4) Remove the stock bulbs by pulling them gently and re-install you new LED bulbs. The LED lights are sensitive. So, if they did NOT work, simply pull them out and put them back in the other way (just like a USB cable). Put the bulbs back in their housing.



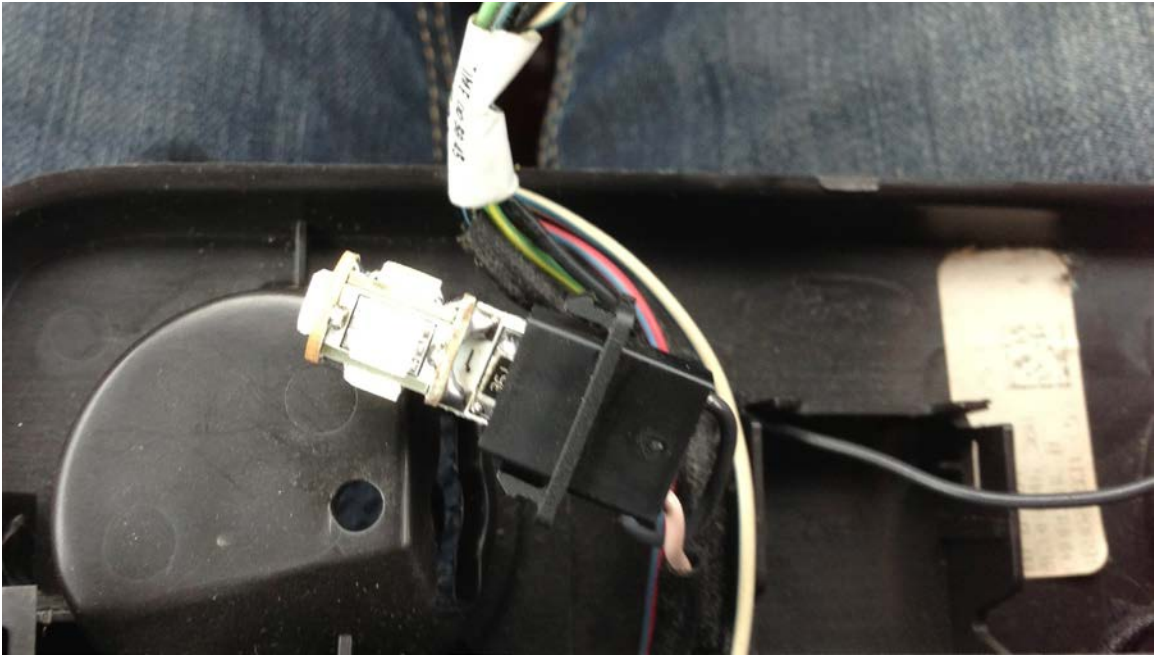

- 5) Now you are ready to plug the grey connector back into the harness. Make sure the bulbs are working. If everything is working well, line up the tabs on the dome housing and push them in simply.
- 6) Now you have a brighter light and a better appearance to your Mustang!



Installation Instructions written by AmericanMuscle Customer Abdulrahman Al Abdulhai 4/11/13