



We have our video install guides on our website and on youtube.com  
Also feel free to call or email us if you have any questions  
1-855-457-5683  
information@lovethedrive.com

# 2015-16 Mustang with Lightbar

## Love The Drive Wind Deflector

### Install Guide

This wind deflector is designed to fit in a 2015 to 2016 Mustang convertible with a Lightbar install (From CDC or Saleen). No modifications to your convertible are needed. The wind deflector is design to go in and out of your convertible in under 30 seconds. The wind deflector can stay in your convertible with the top up or down.

Start by lowering your top. Then lower the wind deflector into the rear seat area.



The front brackets sit on the side trim panel close to your light bar. All the brackets are coated in a soft vinyl so it will not mark your Mustang






The rear brackets sit on the trim panel in your back seat. The brackets are designed to be used with your boot cover if you choose to.



The Wind Deflector is designed to sit under your Lightbar. The wind deflector should not touch your Lightbar. It will be 1/4 inch away.

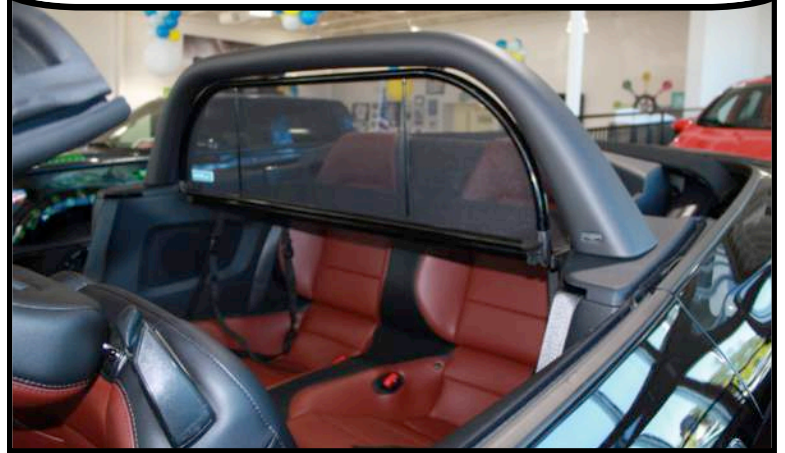

There are 4 straps that hold your wind deflector down. Two use the child anchor system and two attached to the bottom of the trim panel



The black snap hook straps slide into the holes in the rear seats. They will lock into the Child Anchor system. Then buckle to the strap into the wind deflector



The silver hook straps hook into the cutout on the bottom of the trim panel and then buckle into the bottom of the wind deflector



You can adjust the height of your wind deflector. The wind deflector comes with spacers under the front brackets.



To lower the height of the wind deflector remove 1 or 2 spacers on both sides. this will lower the wind deflector.



**If you have any questions or comments please call 1-855-457-5683 or email [information@lovethedrive.com](mailto:information@lovethedrive.com) at [www.lovethedrive.com](http://www.lovethedrive.com)**